

### Installation Manual

#### Neutralisation Unit 50-0040

#### Material

Acid resistant polypropylene  
Connections : 1 1/2" BSP male connection (inlet and outlet)  
Article number : 50-0040  
Integrated support with castors included

#### Installation

The neutralisation unit should be installed directly near or under the sink. Install the unit between the sink outlet and the waste pipe (the highest connection is the inlet).  
Fill compartment 2 and 3 with neutralisation grains.

Check if the unit works properly before use.

#### Cleaning and Maintenance

- The internal bucket in compartment 1 needs to be emptied and cleaned regularly. Before re-using the unit, check if the connections are tightened well, to avoid any leakage.
- Check the pH-level of the waste water on a regularly basis. As soon as the neutralising effect becomes less, the unit needs to be re-filled with grains.

PLEASE NOTE: The neutralisation unit is suitable for connection under 1 sink, with an outlet of maximally  $\varnothing$  50mm.

For any questions, please call +31-38-4215522

